

# Ampeg®



## SCR-DI


Quick Start Guide  
Guide de démarrage rapide  
Schnellstartanleitung  
Guía de inicio rápido  
クイックスタート・ガイド  
快速入门指南

## What's in the Box


SCR-DI, Quick Start Guide.

## Hookup Diagrams



PA / Recording Setup

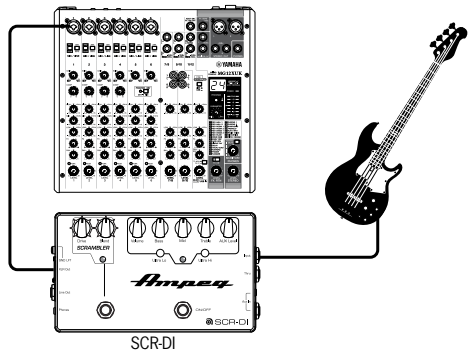


Practice / Live Setup

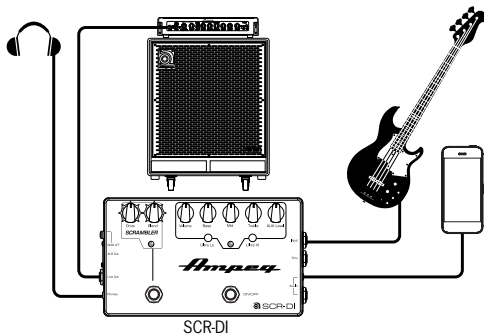

## Front and Side Panels

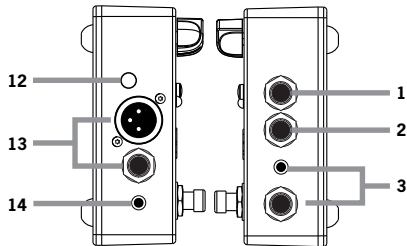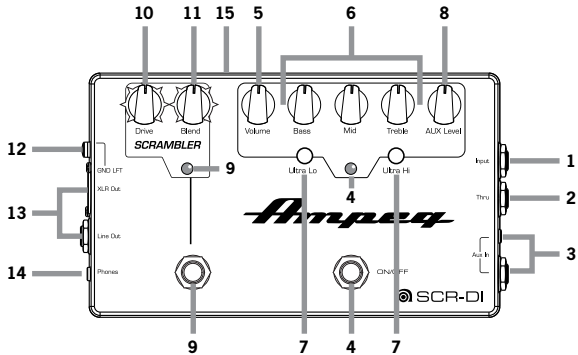

## Rear and Bottom Panels

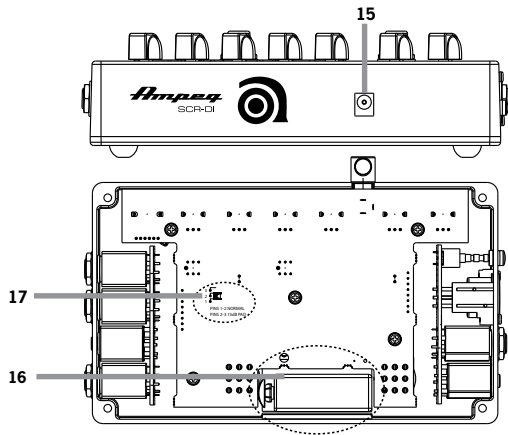

## Front, Rear, Side, and Bottom Panel Descriptions

1. **Input:** Connect a passive or active instrument to this Input jack.
2. **Thru:** Unaffected output for use with either a tuner or clean signal to amplifier.
3. **Aux Input:** Input for an MP3 player or other music source. The Aux Input signal appears in the headphone output only.
4. **EQ On/Off Switch:** Turns the EQ on/off. The LED indicates EQ on/off.
5. **Volume:** Adjusts the overall output level.
6. **EQ Knobs:** Boost or cut the levels at certain frequencies to enhance the sound.
7. **Ultra Hi/Ultra Lo Switches:** Boosts high or low frequencies.
8. **Aux Level:** Adjusts the Aux Input level.
9. **Scrambler On/Off Switch:** Turns the Scrambler effect on/off. The LED indicates Scrambler on/off.
10. **Scrambler Drive:** Adjusts the amount of Drive.
11. **Scrambler Blend:** Blends the Scrambler effect-processed signal with the clean bass signal.
12. **Gnd/Lift:** Connects the ground connection at the balanced Output jack
13. **XLR/Line Out:** Feeds the signal to an external power amplifier, mixer or recording setup.
14. **Headphones:** Connect stereo headphones here.
15. **Power:** Input socket for optional AC/DC power supply.
16. **Battery [not included]:** Provides 9V of power (accessible by unscrewing the four feet on the bottom panel).
17. **Pad:** Reduces input level by 15 dB.

## Getting Started

1. Read and understand the included "Important Safety Instructions."
2. Make all initial connections with the power switches OFF on all equipment. Make sure the Master Volume, Level and Gain controls are all the way down.
3. Insert 9V battery or connect optional AC/DC power supply. The SCR-DI may accept the appropriate voltage as indicated on the rear panel.
4. Connect an instrument to the Input jack with a 1/4" (shielded) instrument cable.
5. While playing the instrument, adjust the volume knob to the preferred level.
6. Adjust the EQ knobs to taste.

## Technical Specifications

	<b>SCR-DI</b>
<b>Signal-to-Noise Ratio (20 Hz – 20 kHz)</b>	90 dB
<b>Maximum Gain</b>	24 dB
<b>Power Requirements</b>	Internal: 9V Battery / External: 9–12V DC @ 100mA
<b>Size (H x W x D)</b>	2.2 x 7.6 x 4.3 in / 56 x 193 x 110 mm
<b>Weight</b>	2.6 lb / 1.2 kg

All specifications subject to change



## WARRANTY AND SUPPORT

Visit [WWW.AMPEG.COM](http://WWW.AMPEG.COM) to...

- (1) ...identify **WARRANTY** coverage provided in your local market. Please keep your sales receipt in a safe place.
- (2) ...retrieve a full-version, printable **OWNER'S MANUAL** (English only) for your product.
- (3) ...**REGISTER** your product.
- (4) ...**CONTACT** Technical Support, or call 818-575-3600.

[www.ampeg.com](http://www.ampeg.com)

Yamaha Guitar Group, Inc.

26580 Agoura Road, Calabasas, CA 91302-1921 USA

Part No. 40-00-0533 Rev. B



© 2019 Yamaha Guitar Group, Inc. All rights reserved.

Ampeg and the Ampeg logo are trademarks or registered trademarks of Yamaha Guitar Group, Inc. in the U.S. and/or other jurisdictions.